

# Redukce napájení z konektoru 5,5 x 2,5mm (C13)

Katalogové číslo: 60.00.2813



## Použitelné pro zařízení:

(Pro zdroje s napětím 16V) (Pro zdroje s napětím 19V)

TOSHIBA	Portege 3500, Portege 3500, Portege 4000, Portege 4000, Portege 4005, Portege 4010, Portege A100, Portege A100, Portege M, Portege M300, Portege M400, Portege M500, Portege M700, Portege M750, Portege M100, Portege M100, Portege M200, Portege M200, Portege M205, Portege M40, Portege M40, Portege M400, Portege M400, Portege M405, Portege R200, Portege R200, Portege R200-S234, Portege R300, Portege S100, Portege S100, Satellite 1400, Satellite 1400, Satellite 1405, Satellite 1410, Satellite 1415, Satellite 1800, Satellite 1800, Satellite 1805, Satellite 1830, Satellite 2400, Satellite 2400, Satellite 2405, Satellite 2410, Satellite 2415, Satellite 5000, Satellite 5000, Satellite 5005, Satellite 5105, Satellite 5200, Satellite 5205, Satellite 5100, Satellite 5100, Satellite 5105, Satellite 5200, Satellite 5200, Satellite 5205-S503, Satellite A10, Satellite A10, Satellite A15, Satellite A15, Satellite A50, Satellite A50, Satellite A55, Satellite A55, Satellite A80, Satellite A80, Satellite M20, Satellite M20, Satellite M30, Satellite M30, Satellite M30-S732, Satellite M35, Satellite M35, Satellite M40, Satellite M40, Satellite M40 (except M40-S312TD), Satellite M45, M45-S165X, M45-S169 & M45-S169X), Satellite M45(except M45-S165, Satellite M50, Satellite M50, Satellite M55, Satellite M55, Satellite M55(except M55-S139 & S55-S139X), Satellite M55-S329, Satellite M55-S3291, Satellite P100, Satellite P100, Satellite Pro 6000, Satellite Pro 6000, Satellite Pro 6100, Satellite Pro 6100, Satellite Pro M10, Satellite Pro M10, Satellite Pro M15, Satellite Pro M15, Satellite Pro S300, Satellite Pro S300, Satellite R10, Satellite R10, Satellite R15, Satellite R15, Satellite TE2100, Satellite TE2100, Satellite TE2300, Satellite TE2300, Satellite U, Satellite U200, Tecra 9000, Tecra 9000, Tecra 9100, Tecra 9100, Tecra A1, Tecra A1, Tecra A2, Tecra A2, Tecra A3, Tecra A3, Tecra A3X, Tecra A3X, Tecra A4, Tecra A4, Tecra A4 (01C001), Tecra A4-S211, Tecra A5, Tecra A5, Tecra A5-SP4161, Tecra A5-SP519, Tecra A9, Tecra A9, Tecra A9-S9018V, Tecra M1, Tecra M1, Tecra M2, Tecra M2, Tecra M2-S430, Tecra M2V, Tecra M2V, Tecra M3, Tecra M3, Tecra M4, Tecra M4, Tecra M5, Tecra M5, Tecra M9, Tecra M9, Tecra M9-S5514, Tecra R10, Tecra R10, Tecra R10-S4401, Tecra S1, Tecra S1, Tecra S2, Tecra S2, Tecra S3, Tecra S3, Tecra TE2000, Tecra TE2000, Tecra TE2100, Tecra TE2100, Tecra TE2300, Tecra TE2300, Libretto L5, Libretto L5/080TNLN, Libretto U100, Libretto U100, Libretto U100-108, Libretto U105, Libretto U105, Portege 1410, Portege 1410-S173, Portege 1410-S174, Portege 1415-S173, Portege 1415-S174, Portege 1800, Portege 1800, Portege 1800-S202, Portege 1800-S204, Portege 1800-S254, Portege 1805, Portege 1805-S204, Portege 1805-S254, Portege 1805-S274, Portege 200, Portege 210CDT, Portege 2000, Portege 2000, Portege 2010, Portege 2100, Portege 2100CDS, Portege 2100CDT, Portege 2100CDX, Portege 2105CDS, Portege 2115CDS, Portege 2140XCDS, Portege 2180CDT, Portege 2200, Portege 2210CDT, Portege 2210XCDS, Portege 2250CDT, Portege 2250XCDS, Portege 2400, Portege 2410, Portege 2410-S203, Portege 2410-S204, Portege 2410-S205, Portege 2410-S206, Portege 2500, Portege 2500CDT, Portege 2505CDT, Portege 2515CDS, Portege 2515CDS/4, Portege 2515CTS, Portege 2520CDT, Portege 2540CDT, Portege 2545CDT, Portege 2600, Portege 2600, Portege 2610DVD, Portege 2615DVD, Portege 2700, Portege 2715DVD, Portege 2800, Portege 2800, Portege 2800-S201, Portege 2800-S202, Portege 2805, Portege 2805-S201, Portege 2805-S202, Portege 2805-S301, Portege 2805-S302, Portege 2805-S401, Portege 2805-S402, Portege 2805-S503, Portege 2900, Portege 2900, Portege 300, Portege 300CT, Portege 3500, Portege 3500, Portege 3505, Portege 4000, Portege 4000, Portege 4300, Portege 4320ZDVD, Portege 4340ZDVD, Portege 4360ZDVD, Portege 4600, Portege 4600, Portege 5000, Portege 5000, Portege 5005-S504, Portege 5100, Portege 5100, Portege 5105-S502, Portege 5105-S607, Portege 5105-S608, Portege 5105-S702, Portege 7000, Portege 7000CT, Portege 7010CT, Portege 7020CT, Portege 7100, Portege 7140CT, Portege 7200, Portege 7200, Portege 7200CT, Portege 7200CTE, Portege 7220CTE, Portege A200, Portege A200, Portege A600, Portege A600, Portege A605, Portege M200, Portege M200, Portege M300, Portege M300, Portege M300-100, Portege M300-101, Portege M300-102, Portege M300-104, Portege M300-105, Portege R100, Portege R100, Portege R150, Portege R150, Portege R200, Portege R200, Portege R200-113, Portege R200-128, Portege R200-142, Portege R200-S234, Portege R400, Portege R400, Portege R400-100, Portege R400-106, Portege R400-S4831, Portege R400-S4834, Portege R400-S4835, Portege R400-S4933, Portege R500, Portege R500, Portege R500-106, Portege R500-10J, Portege R500-S5001X, Portege R500-S5002, Portege R500-S5002X, Portege R500-S5003, Portege R500-S5004, Qosmio E10, Qosmio E10, Satellite 1500, Satellite 1555CDS, Satellite 1800, Satellite 1800, Satellite 1800-S203, Satellite 1800-S253, Satellite 1805, Satellite 1805-S203, Satellite 1805-S203, Satellite 1805-S253, Satellite 1805-S273, Satellite 200, Satellite 200, Satellite 210CDT, Satellite 220, Satellite 2000, Satellite 2060, Satellite 2100, Satellite 2100, Satellite 2100CDS, Satellite 2100CDT, Satellite 2100CDX, Satellite 2105CDS, Satellite 2115CDS, Satellite 2140XCDS, Satellite 2180CDT, Satellite 2200, Satellite 2210CDT, Satellite 2210XCDS, Satellite 2230, Satellite 2250, Satellite 2250CDT, Satellite 2250XCDS, Satellite 2400, Satellite 2450, Satellite 2455, Satellite 2455-S3001, Satellite 2455-S305, Satellite 2455-S306, Satellite 2500, Satellite 2500CDT, Satellite 2505CDS, Satellite 2505CDT, Satellite 2510, Satellite 2515CDS,
---------	---

	<p>Satellite 2515CDS/4, Satellite 2515CTS, Satellite 2520, Satellite 2520CDT, Satellite 2530, Satellite 2540, Satellite 2540CDT, Satellite 2545CDT, Satellite 2550, Satellite 2590, Satellite 2590CDS, Satellite 2590CDT, Satellite 2590XDVD, Satellite 2600, Satellite 2600, Satellite 2610, Satellite 2610DVD, Satellite 2615DVD, Satellite 2650, Satellite 2655XDVD, Satellite 2670, Satellite 2700, Satellite 2710, Satellite 2715DVD, Satellite 2740, Satellite 2750, Satellite 2770, Satellite 2800, Satellite 2800, Satellite 2800-S201, Satellite 2800-S202, Satellite 2805, Satellite 2805-S201, Satellite 2805-S202, Satellite 2805-S301, Satellite 2805-S302, Satellite 2805-S401, Satellite 2805-S402, Satellite 2805-S503, Satellite 2900, Satellite 2900, Satellite 300, Satellite 300, Satellite 310, Satellite 320, Satellite 330, Satellite 4000, Satellite 4000, Satellite 4000CDS, Satellite 4000CDT, Satellite 4005CDT, Satellite 4010CDS, Satellite 4010CDT, Satellite 4015CDS, Satellite 4015CDT, Satellite 4020CDT, Satellite 4025CDT, Satellite 4030CDT, Satellite 4060, Satellite 4070, Satellite 4080CDT, Satellite 4090XDVD, Satellite 4100, Satellite 4100XDVD, Satellite 4200, Satellite 4200, Satellite 4260DVD, Satellite 4280XDVD, Satellite 4280ZDVD, Satellite 4300, Satellite 4320ZDVD, Satellite 4340ZDVD, Satellite 4360ZDVD, Satellite 4600, Satellite 4600, Satellite 6000, Satellite 6000, Satellite A10, Satellite A10, Satellite M10, Satellite M10, Satellite M15, Satellite M15, Satellite M15-S405, Satellite M15-S406, Satellite Pro 400, Satellite Pro 400CDT, Satellite Pro 400CS, Satellite Pro 405CS, Satellite Pro 410CDT, Satellite Pro 410CS, Satellite Pro 415CS, Satellite Pro 420CDS, Satellite Pro 420CDT, Satellite Pro 425CDS, Satellite Pro 425CDT, Satellite Pro 430CDS, Satellite Pro 430CDT, Satellite Pro 435CDS, Satellite Pro 435CDT, Satellite Pro 440CDT, Satellite Pro 440CDX, Satellite Pro 440CS, Satellite Pro 440CT, Satellite Pro 445CDT, Satellite Pro 445CDX, Satellite Pro 460CDT, Satellite Pro 460CDX, Satellite Pro 465CDT, Satellite Pro 465CDX, Satellite Pro 470CDT, Satellite Pro 480CDT, Satellite Pro 490CDT, Satellite Pro 490XCDT, Satellite Pro 4000, Satellite Pro 4000, Satellite Pro 4200, Satellite Pro 4200, Satellite Pro 4220, Satellite Pro 4260, Satellite Pro 4260DVD, Satellite Pro 4280XDVD, Satellite Pro 4280ZDVD, Satellite Pro 4300, Satellite Pro 4300, Satellite Pro 4600, Satellite Pro 4600, Satellite Pro 500, Satellite Pro 520CDT, Satellite Pro 550CDT, Satellite Pro A120, Satellite Pro A120, Satellite Pro A120-107, Satellite Pro A120-10L, Satellite Pro A120-10Q, Satellite Pro A120-10Z, Satellite Pro A120-140, Satellite Pro A120-144, Satellite Pro A120-145, Satellite Pro A120-146, Satellite Pro A120-151, Satellite Pro A120-155, Satellite Pro A120-159, Satellite Pro A120-160, Satellite Pro A120-161, Satellite Pro A120-169, Satellite Pro A120-174, Satellite Pro A120-184, Satellite Pro A120-185, Satellite Pro A120-186, Satellite Pro A120-187, Satellite Pro A120-189, Satellite Pro A120-201, Satellite Pro A120-216, Satellite Pro A120-219, Satellite Pro A120-223, Satellite Pro A120SE, Satellite Pro A120SE, Satellite Pro A120SE-102, Satellite Pro A120SE-10W, Satellite Pro A120SE-11H, Satellite Pro A120SE-163, Satellite Pro A120SE-169, Satellite Pro A120SE-172, Satellite Pro A120SE-177, Satellite Pro A120SE-178, Satellite Pro A120SE-179, Satellite Pro A120SE-180, Satellite Pro A120SE-189, Satellite Pro A120SE-220, Satellite Pro A120SE-221, Satellite Pro A120SE-224, Satellite Pro A120SE-237, Satellite Pro A120SE-243, Satellite Pro U200, Satellite Pro U200, Satellite Pro U200-10F, Satellite Pro U200-134, Satellite Pro U200-155, Satellite Pro U200-206, Satellite T2100, Satellite T2100CDX, Satellite U200, Satellite U200, Satellite U200-162, Satellite U200-163, Satellite U205, Satellite U205-S5057, Satellite U205-S5058, Satellite U205-S5067, Tecra 500, Tecra 520CDT, Tecra 550CDT, Tecra 700, Tecra 750CDM, Tecra 750CDS, Tecra 750CDT, Tecra 750DVD, Tecra 780, Tecra 780CDM, Tecra 780CDV, Tecra 780DVD, Tecra 8000, Tecra 8000, Tecra 8100, Tecra 8200, Tecra A11, Tecra A11-S3510, Tecra A3, Tecra A3X, Tecra A3X-102, Tecra A4, Tecra A4, Tecra A4-S111TD, Tecra A4-S211, Tecra A8, Tecra A8, Tecra A8-OSG063, Tecra A8-OSH063, Tecra A8-OSJ063, Tecra A8-106, Tecra A8-10I, Tecra A8-10M, Tecra A8-117, Tecra A8-150, Tecra A8-159, Tecra A8-176, Tecra A8-180, Tecra A8-181, Tecra A8-186, Tecra A8-187, Tecra A8-191, Tecra A8-192, Tecra A8-193, Tecra A8-210, Tecra A8-EZ8412, Tecra A8-EZ8413, Tecra A8-EZ8511, Tecra A8-EZ8511X, Tecra A8-EZ8512, Tecra A8-EZ8512X, Tecra A8-S8414, Tecra A8-S8513, Tecra A8-S8514, Tecra M5, Tecra M5</p>
<b>CHEM USA</b>	<p><a href="#">ChemBook 6120</a>, <a href="#">ChemBook 6120L</a>, <a href="#">ChemBook 7020</a></p>